

1. Remove the bumper.
2. Unplug the wires attached to the bumper.
3. Unscrew the center strip in the bumper.
4. Unscrew the lower diffuser.
5. Unscrew the front sensor panel.







6. Remove the front grill.



7. Remove the filling strip.


8. Insert the drill through the holes in the main strip so that the tip rests on the lower part of the bumper.

9. The tip of the drill should be 2 cm (0.8 in) from the mounting plumb.

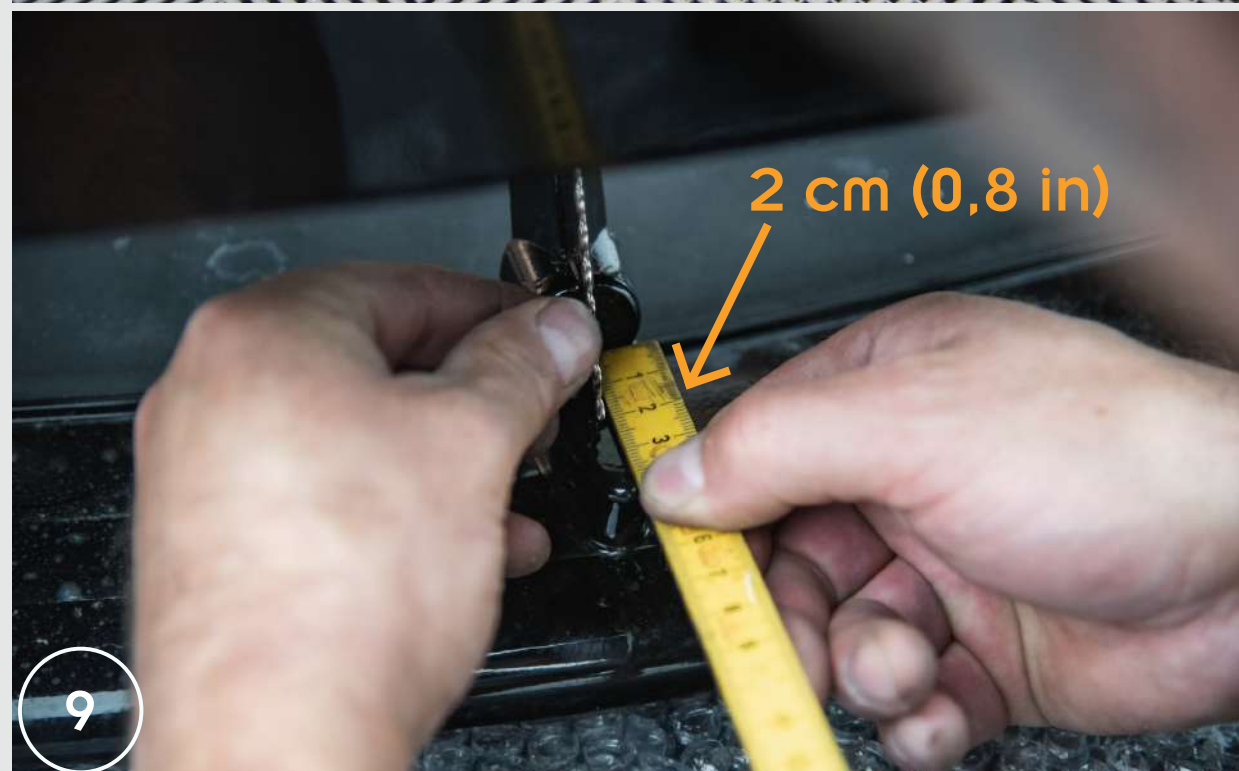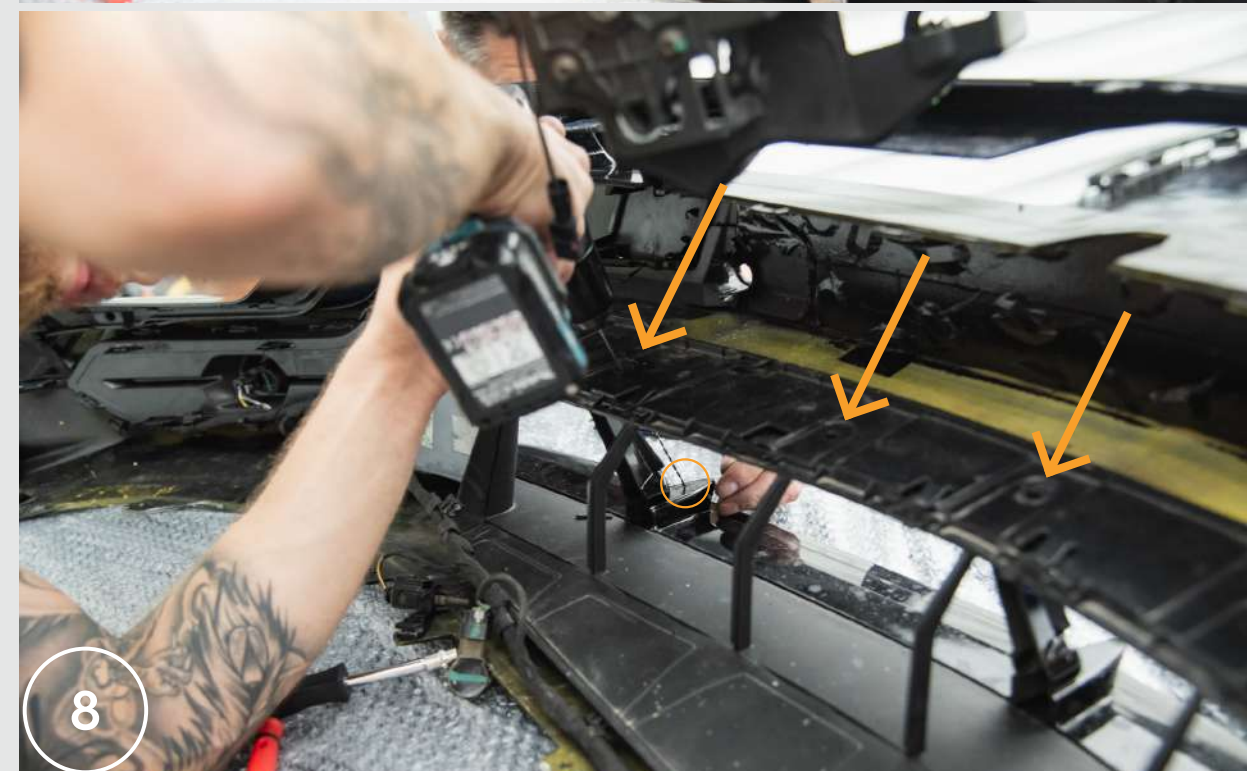



10

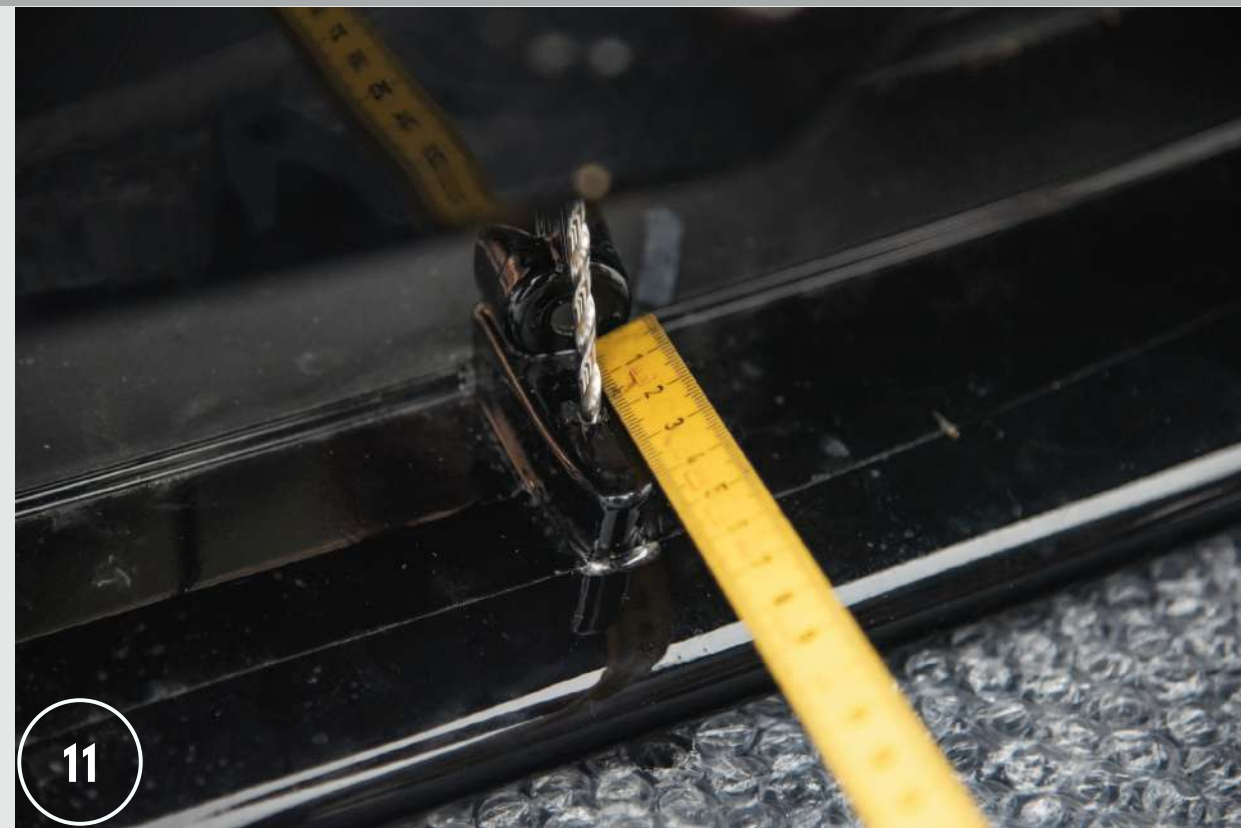

11



12

10. Make a hole in the designated place.

11. Make holes in the same way in the other two places.

12. Drill out the threads in the lower diffuser mountings and drill holes through the diffuser risers and place the diffuser in place.

13. From the bottom of the bumper, make holes in accordance with the holes shown in point 10.

14. Turn the bumper over and place the splitter on it.

15. Using a few screws, attach the splitter to the bumper.



13



13



14




15



16. From the inside of the bumper, insert the drill so that it passes through the main strip, the diffuser risers and the bottom of the bumper. The tip of the drill should rest on the splitter. Make a mark with the drill in the place on the splitter where the drill rested.

17. Unscrew the splitter. Drill holes in the marked places.

18. Put the splitter back on the bumper and insert the strengthening screws through all the holes. The screw heads should be on the bottom of the splitter with the ends sticking out inside the bumper.

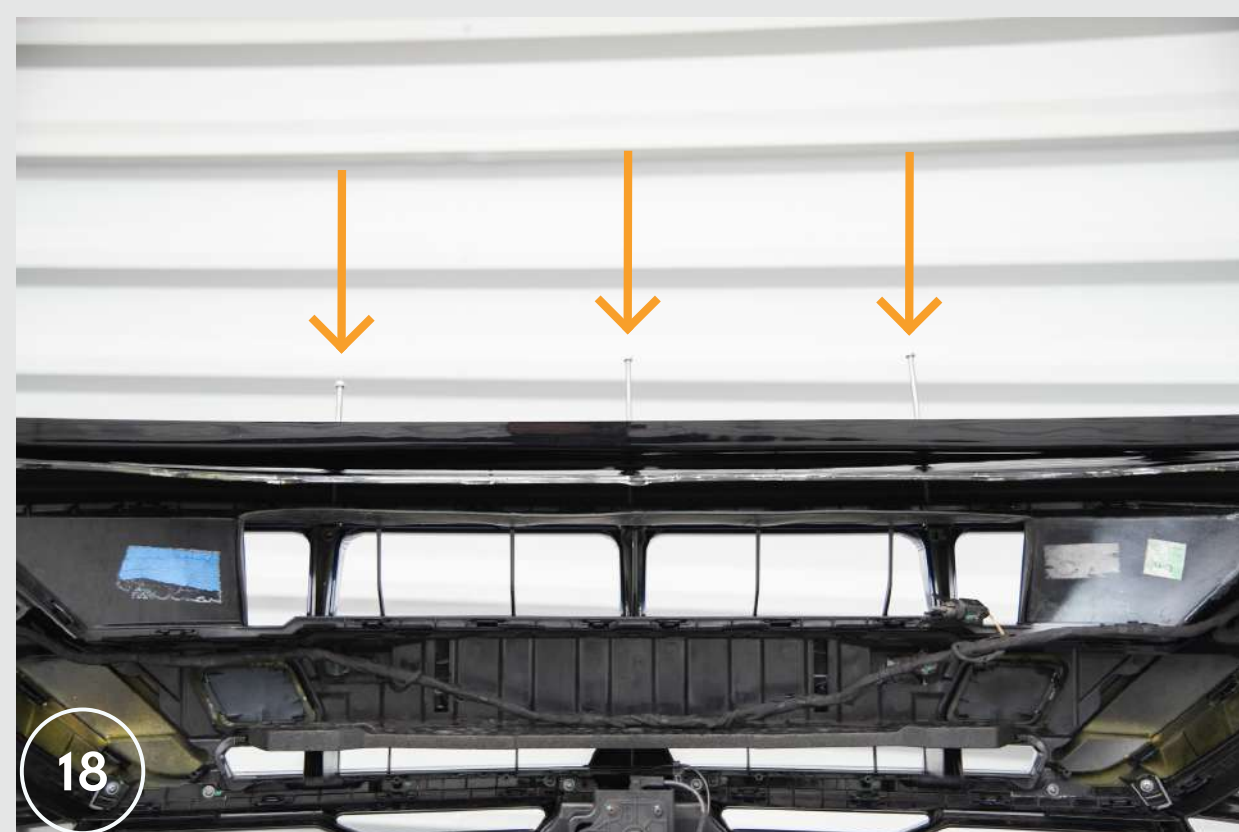



19

19. Prepare the installation kit.


20. On the two extreme sides of the splitter, drill holes through the splitter and the lower part of the bumper.

21. Put the screws in the holes and tighten. The head of the screw should be on the bottom of the bumper.

22. Mark 16 points at equal intervals along the entire length of the splitter.



20

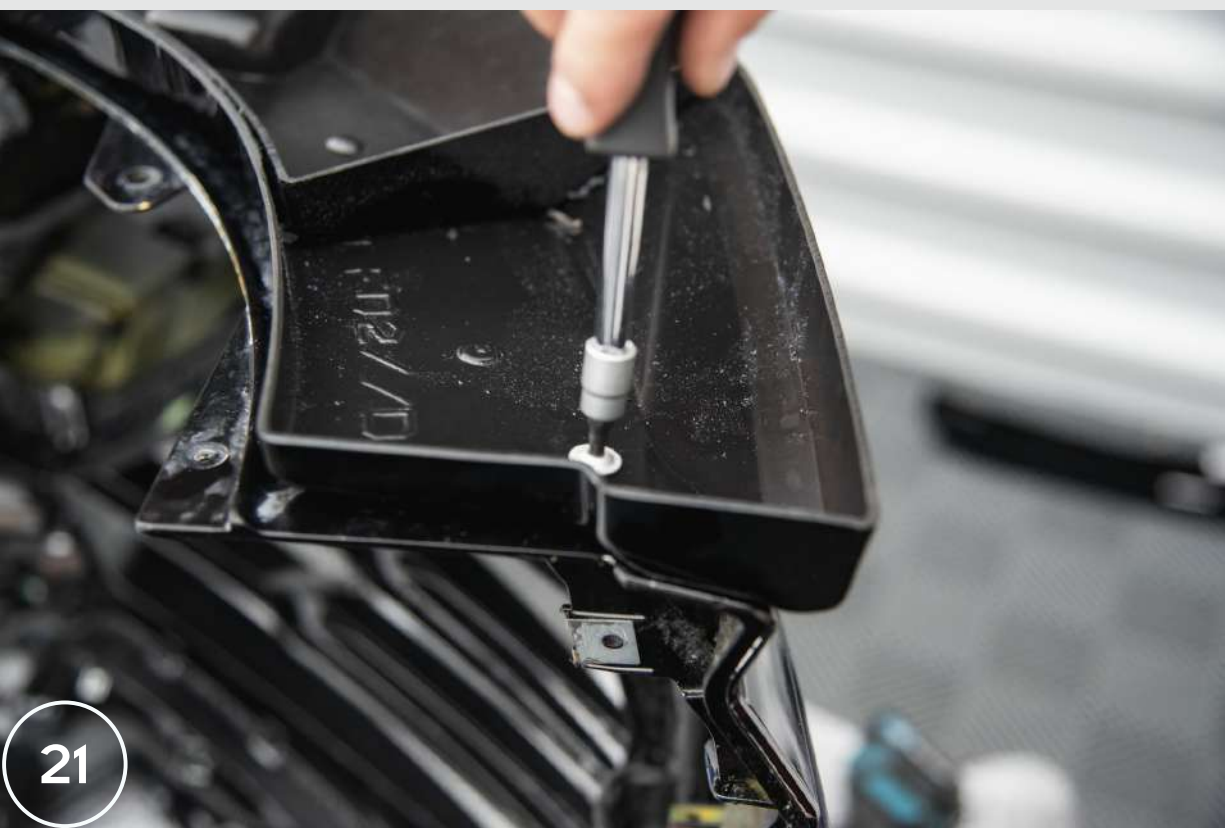

21




21



21



22

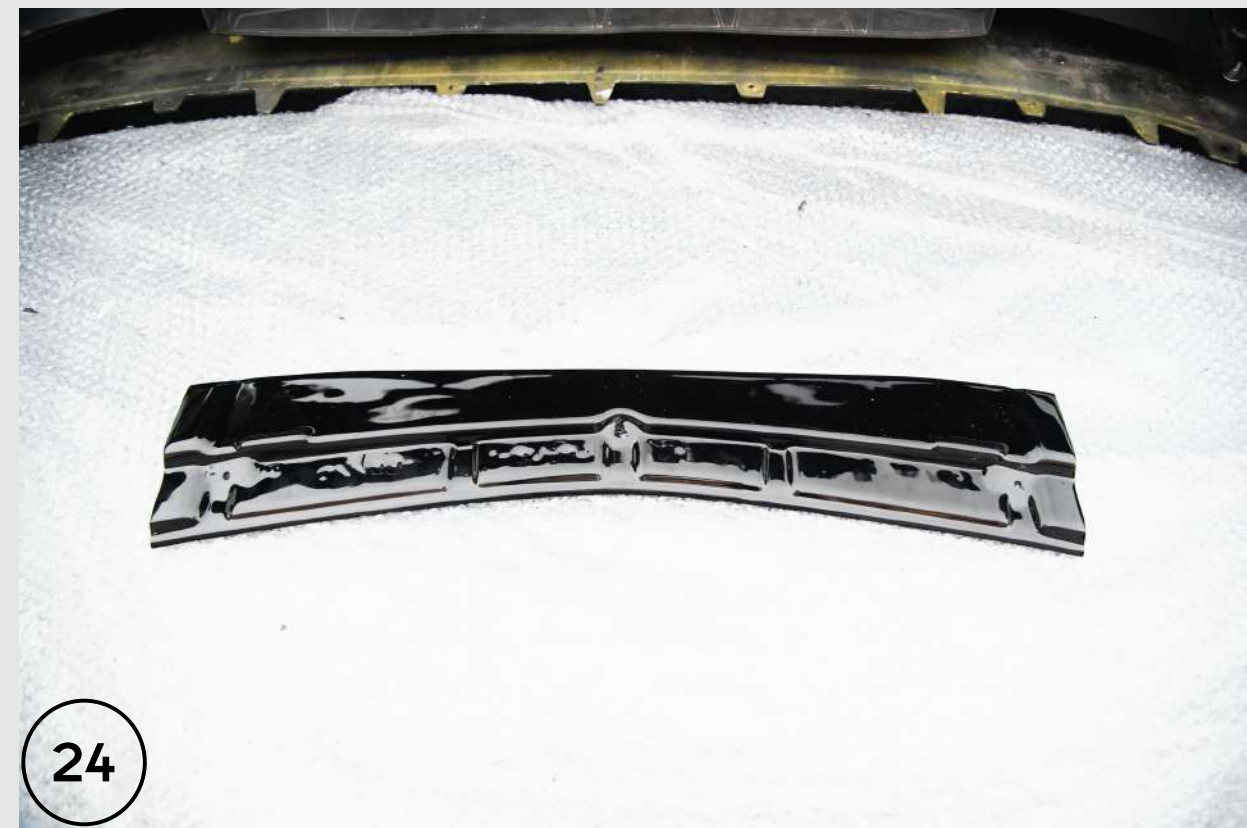

22. Mark 16 points at equal intervals along the entire length of the splitter.

23. Drill the marked points and install them using the screws from the assembly kit.

24. Prepare the reinforcing strip.

25. Place the reinforcing strip where the ends of the reinforcing screws protrude. Drill through the reinforcement strip so that the screw tips can pass through the holes.

26. Put nuts on the ends of the screws and tighten the whole thing.

27. Reinstall all bumper components. Install the bumper to the car.

