

1. Apply the 3D spoiler-cap to the installation site. If your car has an original tailgate flap or other addition on the trunk lid - this element should be removed before installing the 3D spoiler-cap.

2. Make sure that the 3D spoiler-cap fits evenly to the installation site on both sides, from the top and bottom.

3. If the 3D spoiler-cap fits properly to the installation site, mark the outline of the 3D spoiler-cap with tape to mark its exact location.






4. If there is a protective coating on the car's paint, remove this coating and properly polish the surface so that the tape can bind with appropriate force.

5. The gluing surface should be cleaned and degreased before gluing the 3D spoiler-cap.

6. Remove small fragments of the tape protection from the 3D spoiler-cap tape and unwind them outside the 3D spoiler-cap.

7. Apply the 3D spoiler-cap according to the tape marking. Make sure the 3D spoiler-cap is in the correct position. If it's OK, press the places where you unrolled the tape protection.

8. Gradually remove the tape protection and apply pressure to the area where the tape sticks to the installation site.

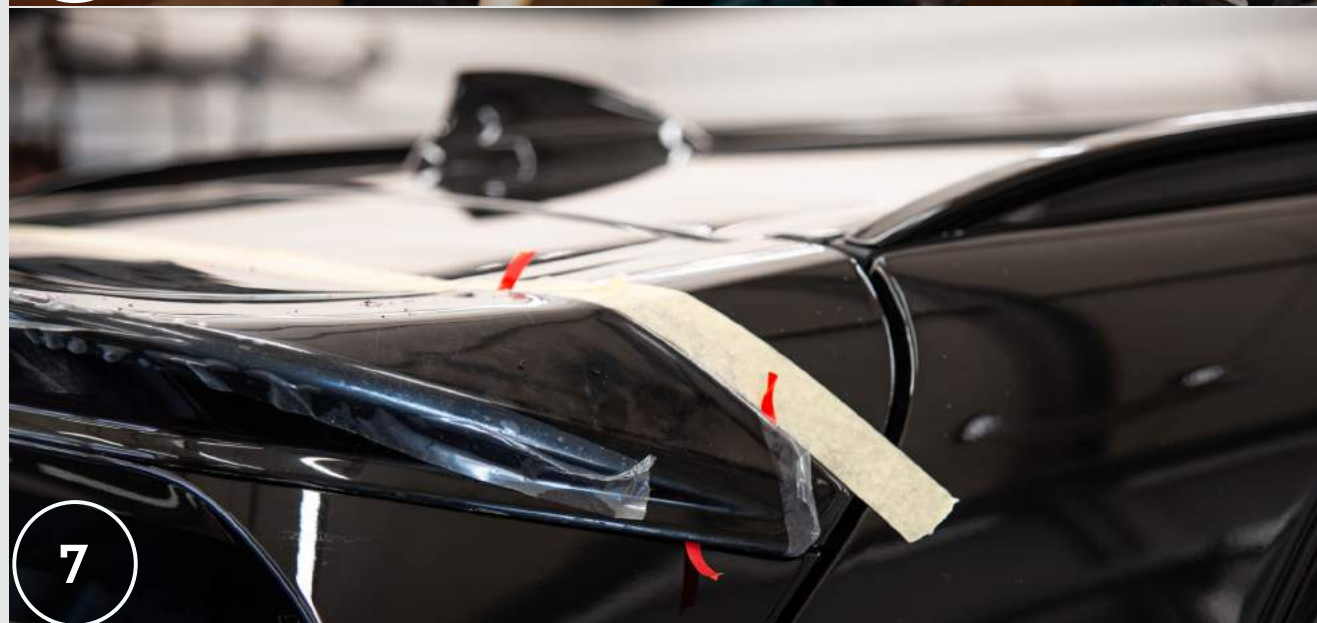



9



10



11

9.Remove the tape marking the 3D spoiler-cap outline.

10.Remove the protective film from the 3D spoiler cap.

11.Use a heater to warm up the places where the tape is located to make the glue bind more tightly. Attention! Heat up carefully so that the heat does not damage the 3D spoiler-cap!

12. Do not wash the car for 24 hours and do not set the 3D spoiler-cap to high air resistance. After this time, the 3D spoiler-cap is ready.



11



12



12

Video assembly  
instructions

